


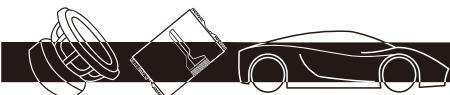

AMPLIFIER USER MANUAL

RC 90c2
RC 70c4 (BT)
RC 150c5 (BT)
RC 600c1
RC 1200c1
RC 1800c1
RC 105c4



FEATURES

RC 90c2

- 2 channel high power class AB amplifier
- MOSFET power supply
- 4 Ohm bridge mode or 2 Ohm stereo
- Adjustable LOW-pass filter: 45 to 225 Hz
- Adjustable HIGH-pass filter 45 to 225 Hz
- High level input with auto-sense function (auto-sense channel 1 only)
- Low level input sensitivity: variable 200mV to 5V
- Protection circuit: Overheating - Overload - Short circuit
- RCA Line Input
- Operating voltage: 10V - 16V (Start/Stop down to 7.5V, max. 3sec.)

RC 70c4 / RC 70c4BT / RC 105c4

- 4 channel high power class AB amplifier
- MOSFET power supply
- 4 Ohm bridge mode or 2 Ohm stereo
- Adjustable LOW-pass filter: 45 to 225 Hz
- Adjustable HIGH-pass filter 45 to 225 Hz
- High level input with Auto-Sense function (Auto-Sense channel 1 only)
- Low level input sensitivity: variable 200mV to 5V
- Protection circuit: Overheating - Overload - Short circuit
- RCA Line Input
- Operating voltage: 10V - 16V (Start/Stop down to 7.5V, max. 3sec.)
- RC70c4BT: Bluetooth audio streaming, BT module included

RC 150c5 / RC 150c5BT

- 4 channel class AB amplifier + 1 channel class D amplifier
- MOSFET power supply
- 4 Ohm bridge mode or 2 Ohm stereo, Ch 5: 2 Ohm stable
- Adjustable LOW-pass filter: 50 to 200 Hz (Ch 5)
- Adjustable HIGH-pass filter 50 to 200 Hz (Ch 1/2 and 3/4)
- Subsonic Filter 10 - 50 Hz (Ch 5)
- High level input with Auto-Sense function (Auto-Sense channel A only)
- Low level input sensitivity: variable 200mV to 5V
- Protection circuit: Overheating - Overload - Short circuit
- RCA Line Input
- Operating voltage: 10V - 16V (Start/Stop down to 7.5V, max. 3sec.)
- RC150c5BT: Bluetooth audio streaming, BT module included

FEATURES

RC 600c1

- Mono High Power Class D amplifier
- MOSFET power supply
- Mono 2 Ohm operation
- Adjustable LOW-pass filter: 40 to 220 Hz
- Subsonic filter: 10 to 50 Hz
- BASS BOOST: -6dB, 0dB and +6dB
- High level input with auto-sense function (auto-sense channel 1 only)
- Low level input sensitivity: variable 200mV to 5V
- Protection circuit: Overheating - Overload - Short circuit
- RCA Line Input
- Operating voltage: 10V - 16V (Start/Stop down to 7.5V, max. 3sec.)
- Connection for Remote Controller RTC / RTC.2 (optional)

RC 1200c1 / RC 1800c1

- Mono High Power Class D amplifier
- MOSFET power supply
- Mono 1 Ohm operation
- Adjustable LOW-pass filter: 40 to 220 Hz
- Subsonic filter: 10 to 50 Hz
- BASS BOOST: -6dB, 0dB and +6dB
- High level input with auto-sense function (auto-sense channel 1 only)
- Low level input sensitivity: variable 200mV to 5V
- Protection circuit: Overheating - Overload - Short circuit
- RCA Line Input
- Operating voltage: 10V - 16V (Start/Stop down to 7.5V, max. 3sec.)
- Connection for Remote Controller RTC / RTC.2 (optional)


⚠ Caution ⚠

Please take the following precautions when installing your amplifier:

- a) Take extra care when making the connections. Make sure that no electrical cable, gas tank, hydraulic brakes or other components get damaged.
- b) Allow enough cooling and air circulation and avoid installing the unit in small closed boxes or close to parts that heats up easily.
- c) Keep the amplifier away from liquid, moisture, heat and foreign materials.
- d) This amplifier can only be used in vehicles with 12V DC power supply.
- e) Never install the power supply cable with other original vehicle wires (gas cables), fan motors, control modules etc.
- f) Install the signal cable (cinch cable) as well as speaker cable far away from the power cables to avoid interference with music signals.
- g) To avoid dangers of cables binding, squeezing or breaking, use the cables supplied with your amplifier.


POWER CONNECTION

RC 90c2 / RC 70c4(BT) / RC 600c1

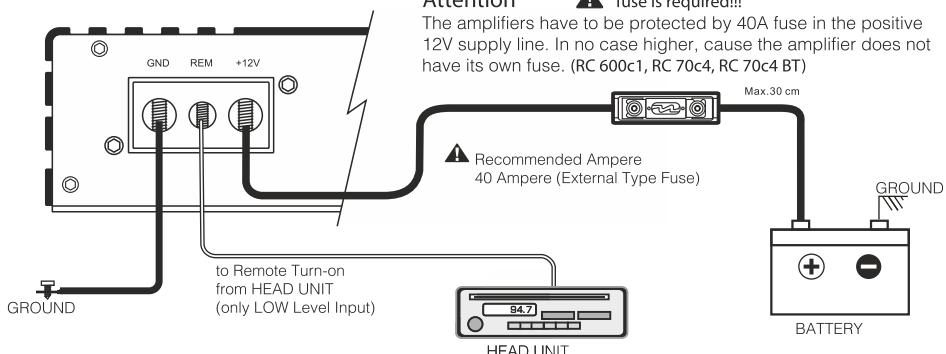

RC 1200c1 / RC 150c5(BT) / RC 105c4 / RC1800c1

! The amplifiers have to be protected by 80A fuse in the positive 12V supply line. In no case higher, cause the amplifier does not have its own fuse (RC1800c1 fuse 120A)

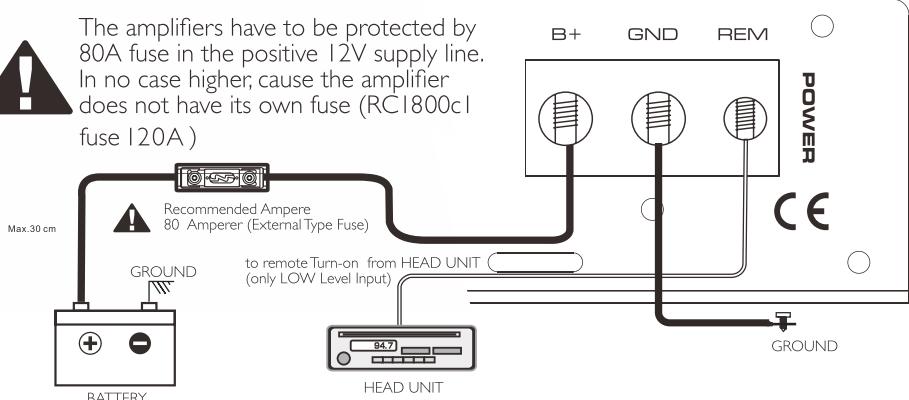

1. Battery disconnection

First, disconnect the power supply of the vehicle by removing the ground of battery.

2. Ground connection

Connect the GND (ground) connection of the amplifier with the car chassis.

Keep this cable as short as possible and use a suitable cross section (AWG size 6 - 4). Make sure, that the connection with the vehicle chassis is free of paint, dirt and dust.

3. +12V Power connection

Connect the +12V contact of the amplifier with the supply cable via a fuse directly to the vehicle battery. Keep in mind, that the lenght of the cable from fuseholder to vehicle battery has to be maximum 30cm.

For the amplifier to function at its best, use a high quality fuse holder and suitable cable preferably AWG 6-4 cable.

This fuse protects the amplifier and the vehicle against the possibility of a short circuit in the power cable.

4. Remote connection


Connect the REM-terminal of the amplifier to the remote-output (automatic 12 antenna-output) of the head unit. Use a 0,5 - 1,5 mm power cable.

RCA CONNECTION

RC 90c2

— High Level Input with auto sense (auto sense works only on CH1)


■ LOW Level Input. 12V remote signal required

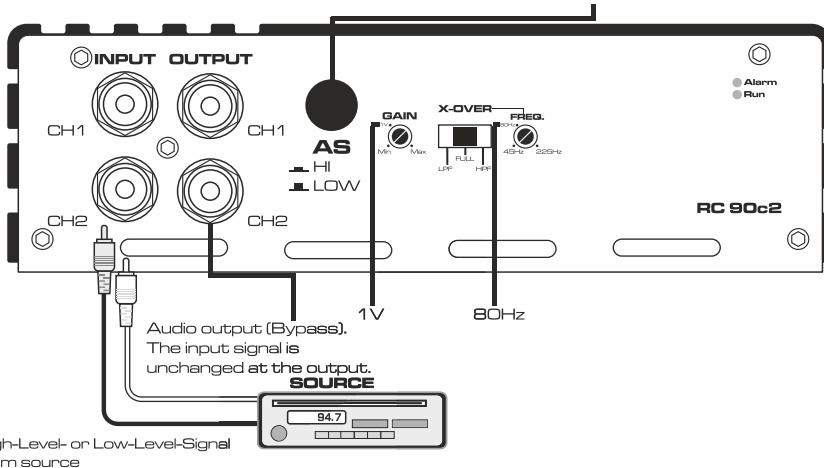

RC 70c4 / RC 105c4

— High Level Input with auto sense (auto sense works only on CH1)


■ LOW Level Input. 12V remote signal required

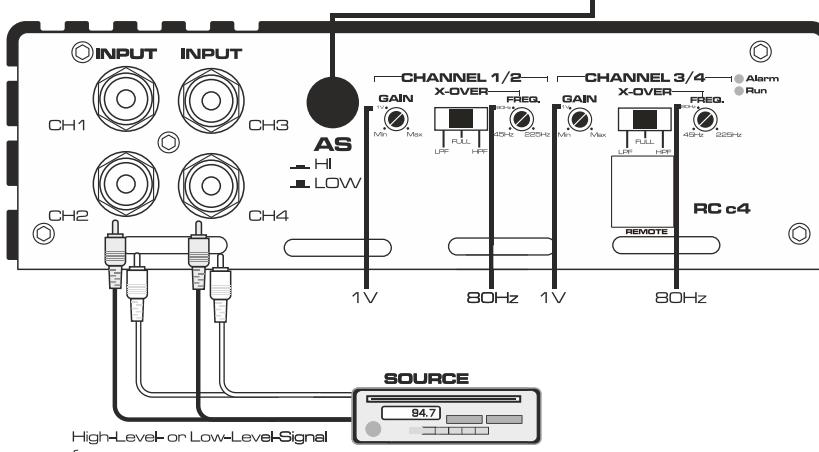

RCA CONNECTION

RC 70c4BT

- High Level Input with auto sense (auto sense works only on CH1)
- LOW Level Input. 12V remote signal required

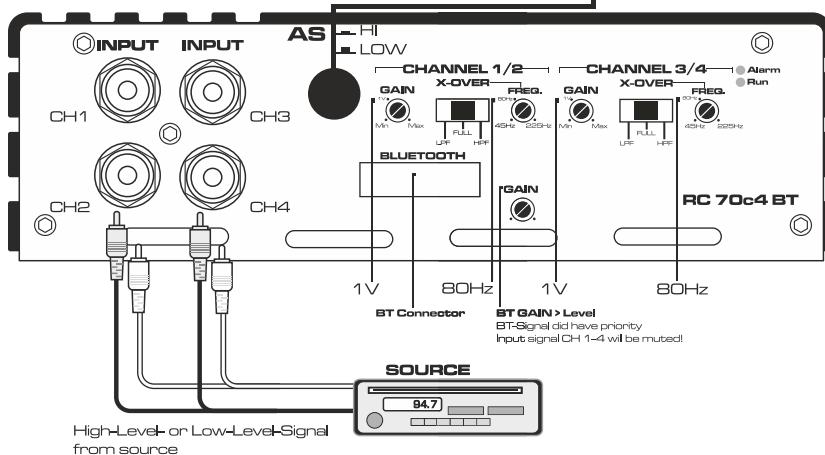

RC BT Audio Streaming Module

Using 12V Remote (low-level Input mode) or the auto sense function (high-level mode) to switch the amplifier on/off.

Connect the enclosed BT-Modul to the connector on the side panel from the amplifier and take notice of the LED behavior:

RED / BLUE LED flash by turns:

searching BT device. Source BT device have to be switched on and have to be connect with the RC BT-Module by pushing on the selected device.

Blue LED flash fast 4 times:

BT device is connected and ready for play. Start playing music. The analog signal will be muted hardly as long the digital signal is playing. The digital music signal have to be adjusted by the BT Gain poti.

Blue LED flash slow 2 times:


Music stream is activated.

The analog signal will be activated by stopping the digital music streaming.

RC 150c5


- High Level input with auto sense (auto sense works only on input A)

- LOW Level Input. 12V remote signal required

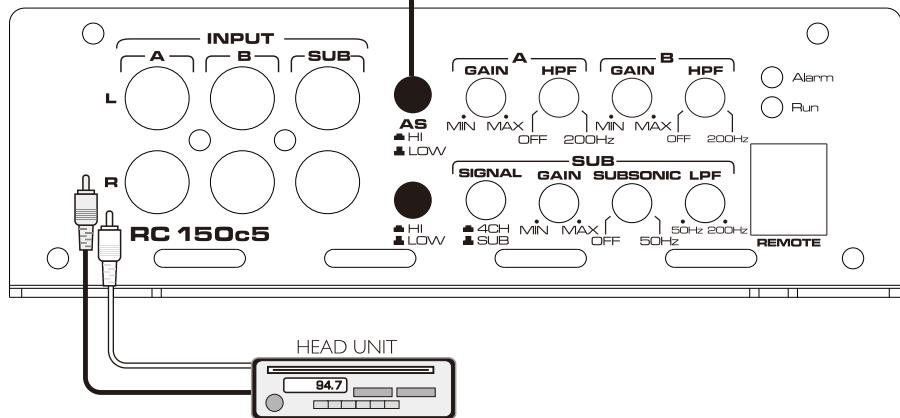

RCA CONNECTION

RC 150c5BT

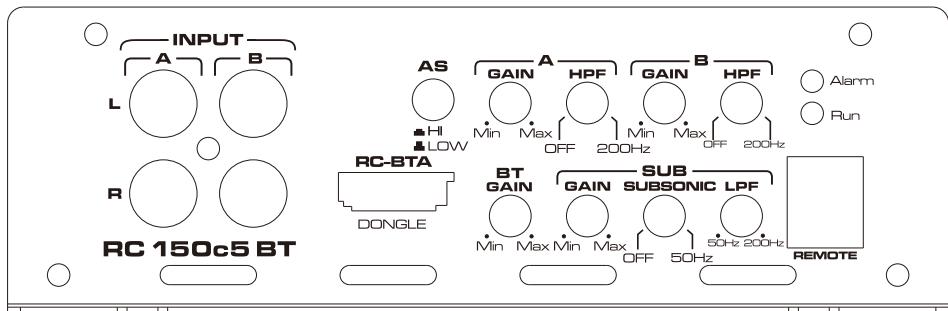

Only RC150c5BT:

The SUB input is in principle mixed from input A+B .

An independently SUB input are not available.

All other RCA functions are similar to the RC150c5



RC BT Audio Streaming Module

Using 12V Remote (low-level Input mode) or the auto sense function (high-level mode) to switch the amplifier on/off.

Connect the enclosed BT-Module to the connector on the side panel from the amplifier and take notice of the LED behavior:

RED / BLUE LED flash by turns:

searching BT device. Source BT device have to be switched on and have to be connect with the RC BT-Module by pushing on the selected device.

Blue LED flash fast 4 times:

BT device is connected and ready for play. Start playing music. The analog signal will be muted hardly as long the digital signal is playing. The digital music signal have to be adjusted by the BT Gain poti.

Blue LED flash slow 2 times:


Music stream is activated.

The analog signal will be activated by stopping the digital music streaming.

RC 600c1/1200c1/1800c1

■ High Level Input with auto sense
(auto sense works only on CH 2)


■ LOW Level Input, 12V remote signal required !

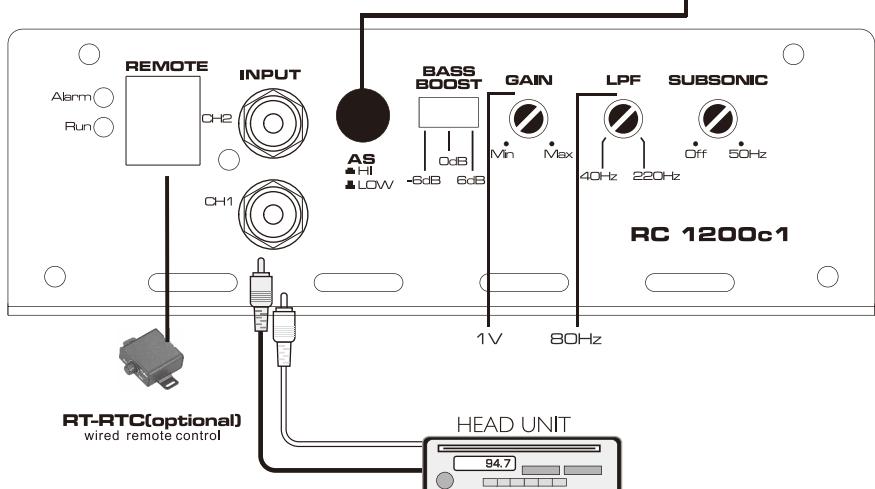


SPEAKER CONNECTION

RC 90c2


1-Channel Bridged

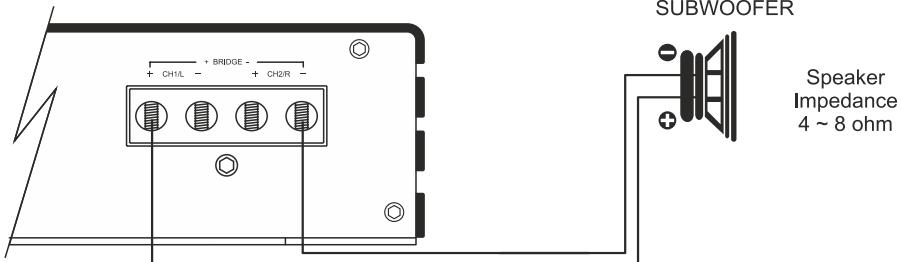

2-Channel Stereo

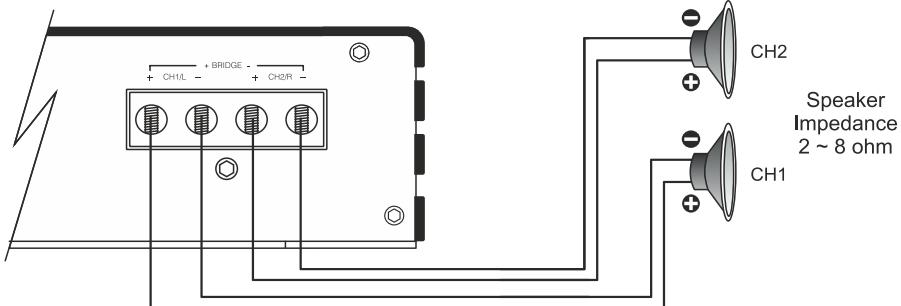


Tri-Mode

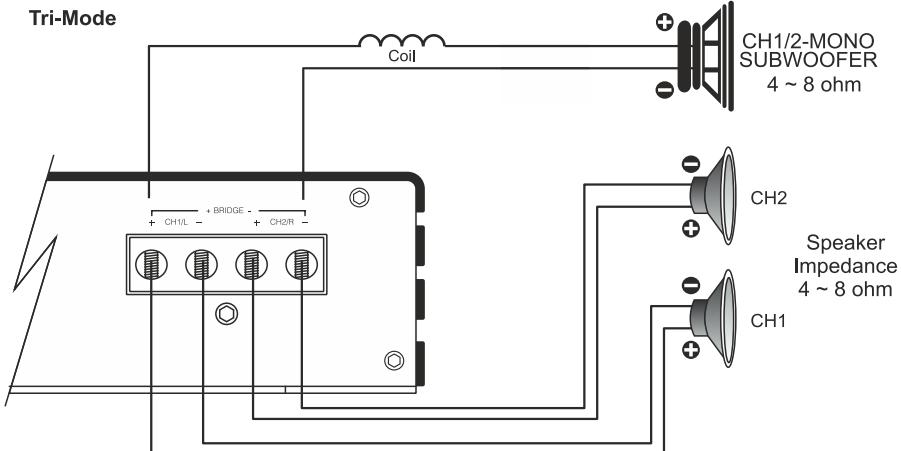

SPEAKER CONNECTION

RC 70c4(BT) / RC 105c4

2-Channel Bridged

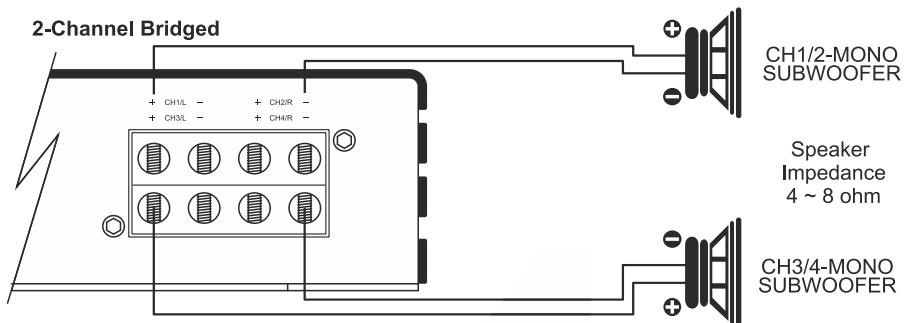


CH1/2-MONO
SUBWOOFER

Speaker
Impedance
4 ~ 8 ohm


CH3/4-MONO
SUBWOOFER

4-Channel Stereo

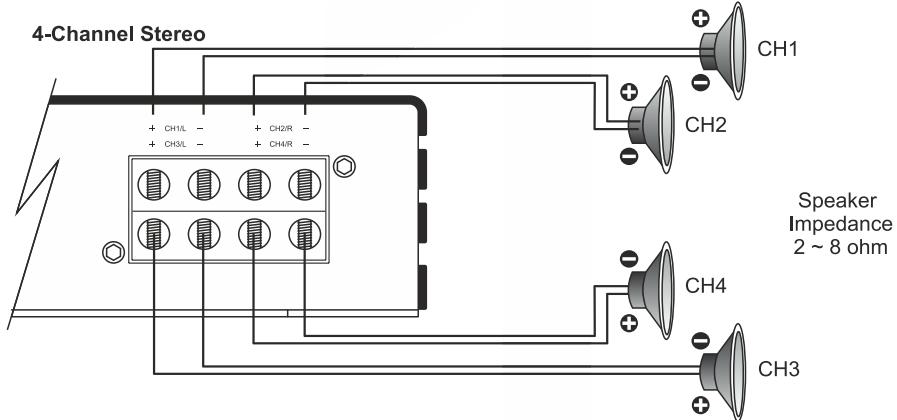

CH1
CH2
CH3
CH4
Speaker
Impedance
2 ~ 8 ohm

2-Channel Stereo + 1-Channel Mono Bridged


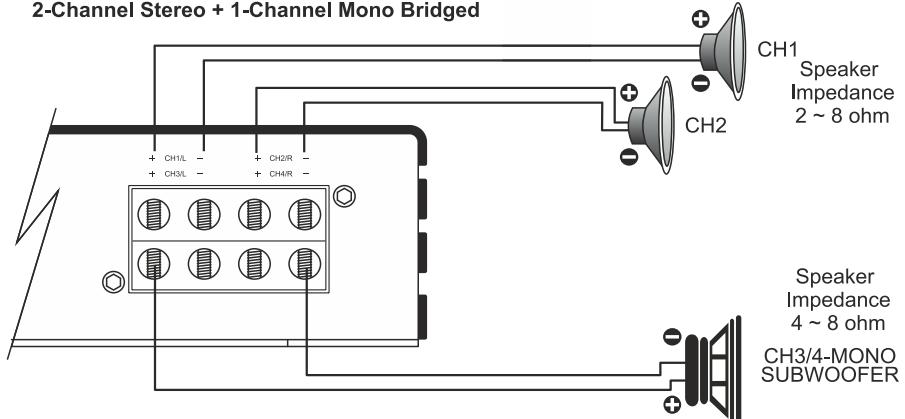


CH1
CH2
Speaker
Impedance
2 ~ 8 ohm


CH3/4-MONO
SUBWOOFER
Speaker
Impedance
4 ~ 8 ohm

SPEAKER CONNECTION

RC 150c5(BT)

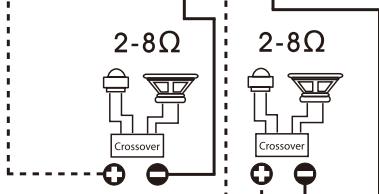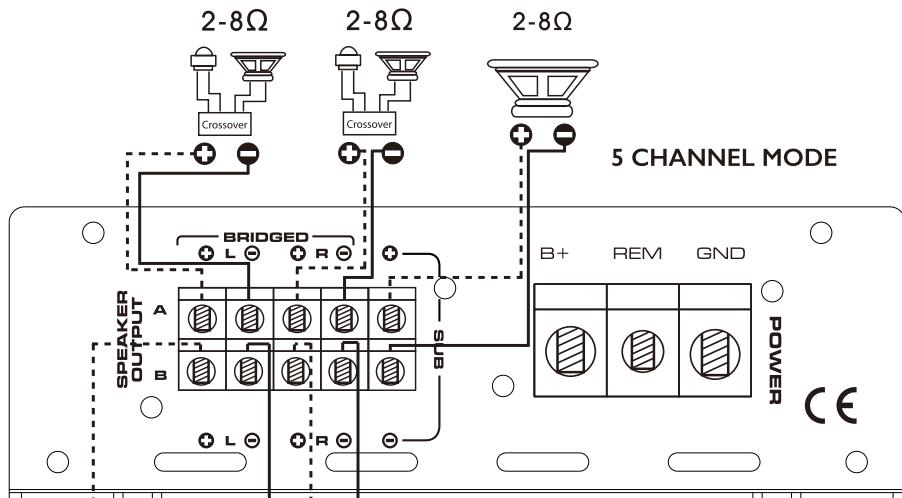


5 CHANNEL MODE

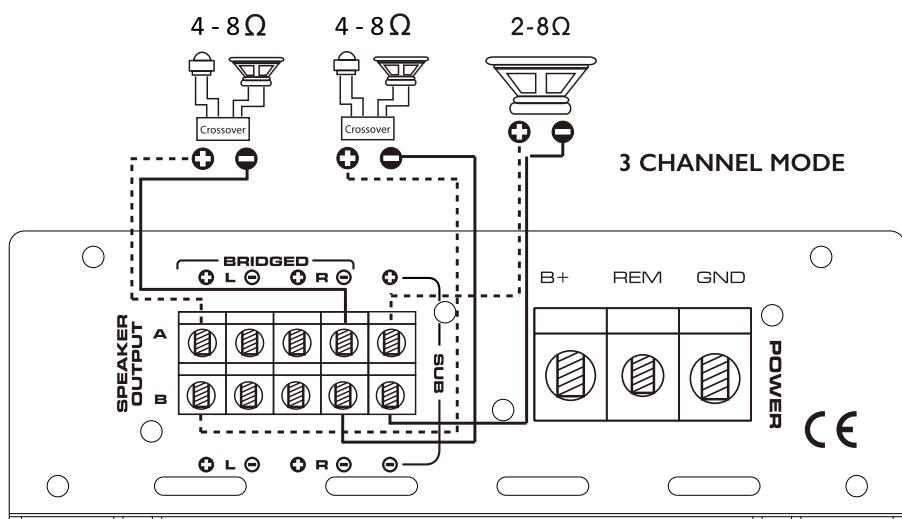

3 CHANNEL MODE

SPEAKER
OUTPUT

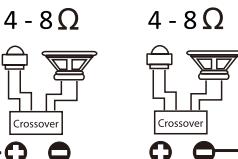

SPECIFICATIONS

RC 90c2

RMS power, 4 Ohm Stereo: 85W x 2
RMS power, 2 Ohm Stereo: 130W x 2
RMS power, 4 Ohm bridged: 260W x 1
Signal to noise ratio: >80dB
T.H.D @RMS 1 Watt: < 1%
Channel separation : > 50dB
Dimensions : 215 x 147 x 52mm(LxBxH)

RC 150c5 (BT)

RMS power, 4 Ohm Stereo: 90W x 4 + 300W
RMS power, 2 Ohm Stereo: 120W x 4 + 560W
RMS power, 4 Ohm bridged : 200W x 2 + 300W
Signal to noise ratio : >89dB
T.H.D @RMS 1 Watt: < 0.10%
Channel separation : > 50dB
Dimensions : 415 x 147 x 52mm(LxBxH)

RC 1200c1

RMS power, 4 Ohm: 400W
RMS power, 2 Ohm: 650W
RMS power, 1 Ohm: 1120W
Signal to noise ratio : >100dB
T.H.D @RMS 1 Watt: < 2%
Frequency range : 10Hz – 220Hz
Dimensions : 285 x 147 x 52mm(LxBxH)

RC 1800c1

RMS power, 4 Ohm: 740W
RMS power, 2 Ohm: 1300W
RMS power, 1 Ohm: 1800W
Signal to noise ratio : >100dB
T.H.D @RMS 1 Watt: <1%
Frequency range : 10Hz – 220Hz
Dimensions : 415 x 147 x 52 mm (LxBxH)

RC 70c4 (BT)

RMS power, 4 Ohm Stereo: 68W x 4
RMS power, 2 Ohm Stereo: 105W x 4
RMS power, 4 Ohm bridged : 210W x 2
Signal to noise ratio : >80dB
T.H.D @RMS 1 Watt: < 1%
Channel separation : > 50dB
Dimensions : 288 x 147 x 52mm(LxBxH)
BT-Modul: A2DP Audio Streaming

RC 600c1

RMS power, 4 Ohm: 360W
RMS power, 2 Ohm: 560W
Signal to noise ratio : >80dB
T.H.D @RMS 1 Watt: < 2%
Frequency range: 20Hz – 220Hz
Dimensions : 198 x 147 x 52mm(LxBxH)

RC 105c4

RMS power, 4 Ohm stereo:105W x 4
RMS power, 2 Ohm stereo:150W x 4
RMS power, 4 Ohm bridged:300W x 2
Signal to noise ratio (1W): >80dB
Channel separation:>50dB
Dimensions : 360 x 147 x 52mm(LxBxH)



Information on disposal of old electrical and electronic equipment

(Applicable for countries that have adopted separate waste collection systems) Products with the symbol (crossed-out wheeled bin) cannot be disposed of as household waste. Old electrical and electronic equipment should be recycled at a special waste facility. Contact your local authority for details in locating a recycle facility nearest to you. Proper recycling and waste disposal will help conserve resources whilst preventing detrimental effects on our health and the environment. This product can be disposed of with the used car together. In this case don't remove it from the car.

Gladen Europe GmbH
Bertha-Benz-Str. 9
D-72141 Walddorfhäslach
www.gladen.de



Troubleshooting

This power amplifier is featured with an efficient protection system to prevent any damages such as overheating, overloading, short circuit and DC at the loudspeaker output. If the amplifier reports such errors, protection LED will light up red. Prior to checking the problem(s), first turn down all levels of the head unit and then turn it off.

AMPLIFIER IS NOT POWERED UP, NO LED IS LIGHTNING	<ul style="list-style-type: none">- ground connection professional connected ?- +12V power cable well connected ?- remote cable professional connected ?- fuses inserted and alright ?- analyze voltage on the amplifier.
PROTECTION LED ILLUMINATES BLUE WHILE AMPLIFIER IS SOUNDLESS	<ul style="list-style-type: none">- cinch cable alright and professional connected ?- loudspeaker professional connected ?- head unit alright ?
PROTECTION LED OLLUMINTES RED WHEN AMPLIFIER IS POWERED UP	<ul style="list-style-type: none">- amplifier too hot ?- short circuit at the loudspeaker output ?- short circuit caused by loudspeaker cable with vehicle chassis (ground) ?- input voltage too high (e.g. faulty lighting dynamo) ?
OVERHEATING (PROTECTION LED ILLUMINATES RED WHEN AMPLIFIER IS POWERED UP)	<ul style="list-style-type: none">- impedance alright ?- loudspeaker error ?- adequate ventilation around the amplifier ? <p>! CAUTION ! After cooling down, the amplifier turns on automatically</p>
ERROR IN AMPLIFIER FUSE	<ul style="list-style-type: none">- ground professional connected ?- loudspeaker impedance alright ? <p>! CAUTION ! Make sure when changing fuses to use the same value.</p>
SOUND TOO LOW OR LOW-DISTORTED SOUND	<ul style="list-style-type: none">- input level control "GAIN" is set to match the head unit ?- output level control of the head unit alright ?- loudspeaker error ?- loudspeaker cable checked ?- crossover frequencies have been properly set ? (Check head unit, amplifier, DSP, sound processor, equalizer, frequency bandpass filter...)
HIGH HISS-ENGINE NOISE IN SPEAKER	<ul style="list-style-type: none">- ground connection professional connected ?- short circuit caused by loudspeaker cable with vehicle chassis ground ?- cinch cable (RCA) and/or loudspeaker cable installed too close to the power connection cable ?- cinch ground (RCA) of head unit alright ?

⚠ CAUTION ⚠

Please contact your specialist dealer if the amplifier still does not work even after the above troubleshooting list had been checked.

For warranty adjustment / repairs, the original invoice has to be presented!

Opening or disassembling the amplifier void warranty!

Ein Öffnen der Endstufe führt in jedem Fall zu Garantieverlust!

Für Garantieleistungen / Reparaturen muss die Originalrechnung beigelegt werden!

nicht funktionieren, wenn Sie sich an Ihren Fachhändler!

Sollte der Verstärker nach der Überprüfung der Fehlerliste

! ACHTUNG !

<p>Störgeräusche in den Lautsprechern.</p> <p>Masseverbindungen Fachgerecht angeschlossen?</p> <p>Kurzschluss Lautsprecher mit Masse (Auto)?</p> <p>Cinchkabel (RCA) und/oder Lautsprecherkabel zu nahe am Stromversorgungskabel verlegen?</p> <p>Cinchkappe (RCA) des Steuergerätes in Ordnung?</p>	
<p>Lautstärke zu gering oder verzerrt.</p> <p>Eingangssignal "Gain" am Steuergerät angepasst?</p> <p>Ausgangssignal des Steuergerätes in Ordnung?</p> <p>Fehler an den Lautsprecherkabeln?</p> <p>Übertragungssignal überprüft?</p> <p>Lautsprecherkabel überprüft?</p> <p>(im Steuergerät, Verstärker, DSP, Soundprozessor, Frequenzfilter)</p> <p>Equilizer, passiver Frequenzweiche, usw.)</p>	
<p>defekt.</p> <p>Endstufensicherung</p> <p>Masse fachgerecht angeschlossen?</p> <p>Impedanz der Lautsprecher in Ordnung?</p> <p>Der Verstärker schaltet automatisch nach dem Wechseln der Lautsprecher?</p> <p>i ACHTUNG !</p>	
<p>Leuchten bei Endstufe zu fehlerhaft</p> <p>Fehler an den Lautsprechern?</p> <p>Impedanz der Lautsprecher in Ordnung?</p> <p>Ausreichende Belüftung der Endstufe?</p> <p>i ACHTUNG !</p>	
<p>Überhitzung</p> <p>(rote PROTECTION-LED)</p> <p>Fehler an den Lautsprechern?</p> <p>Impedanz der Lautsprecher in Ordnung?</p> <p>Ausreichende Belüftung der Endstufe?</p> <p>i ACHTUNG !</p>	
<p>Endstufe eingeschaltet, leuchtet rot.</p> <p>PROTECTION-LED</p> <p>Endstufe zu fehlerhaft</p> <p>Zu hohe Eingangsspannung?</p> <p>Autoclasse (Masse)?</p> <p>Kurzschluss eines Lautsprecherkabels mit dem Massekabel?</p>	
<p>Endstufe kein Ton, blau.</p> <p>POWER-LED leuchtet</p> <p>CMoskabel in Ordning und fachgerecht angeschlossen?</p> <p>Remotekabel fachgerecht angeschlossen?</p> <p>+12V Stromkabel fachgerecht angeschlossen?</p> <p>Massekabel fachgerecht angeschlossen?</p> <p>Spannung mit Messgerät am Verstärker prüfen.</p> <p>Stromleitung eingesetzt bzw. in Ordnung?</p> <p>Spannung mit Messgerät ablesen.</p>	
<p>Endstufe schaltet nicht und schaltet Sie dieses ab.</p> <p>Zur Überprüfung des Problems drücken Sie zunächst die Lautstärke des Steuergerätes herunter.</p> <p>Bei einem Fehler leuchtet die Protection-LED rot auf.</p> <p>Überhitzung, Überspannung, Kurzschluss und vor Gleichspannung am Lautsprecheranschangs.</p> <p>Dieser Hochleistungsvstärker verfügt über ein effizientes Sicherheitssystem (MWPC) gegen</p>	

Fehlerbehebung

Gladen Europe GmbH
Bertha-Benz-Str. 9
D-72141 Waiblingen-Frauenbach
www.gladene.de



Entsorgung von gebrauchten elektronischen und elektrischen Geräten
(Anzuhwendend in Ländern mit einem separaten Sammelsystem für solche Geräte) Das Symbol (durchgestrichene Mülltonne) auf dem Produkt weist darauf hin, dass dieses Produkt nicht als normaler Haushaltsabfall behandelt werden darf. Somit kann es in einer Annahmestelle für das Recycling von elektronischen und elektronisch-behandelten Gütern abgegeben werden müssen. Durch Ihren Beitrag zur Korrektur Entsorgung dieses Produktes schützen Sie die Umwelt und die Gesundheit Ihrer Mitmenschen. Wir bitten Sie daher das Recycling dieses Produktes entsprechend der hier genannten Anweisungen.

Abmessungen: 415 x 147 x 52 mm(LxBxH)

Frequenzbereich: 10Hz - 220Hz

T.H.D @ RMS 1 Watt: < 1%

Signal / Rauschabstand: >100dB

RMS Leistung, 1 Ohm: 1800W

RMS Leistung, 2 Ohm: 1300W

RMS Leistung, 4 Ohm: 740W

RC 1800C1

Abmessungen: 285 x 147 x 52mm(LxBxH)

Frequenzbereich: 10Hz - 220Hz

T.H.D @ RMS 1 Watt: < 2%

Signal / Rauschabstand: >100dB

RMS Leistung, 1 Ohm: 1120W

RMS Leistung, 2 Ohm: 650W

RMS Leistung, 4 Ohm: 400W

RC 1200C1

Abmessungen: 415 x 147 x 52mm(LxBxH)

Frequenzbereich: 20Hz - 220Hz

Kanaltreppenung: < 2%

T.H.D @ RMS 1 Watt: < 0.10%

Signal / Rauschabstand: >80dB

RMS Leistung, 2 Ohm: 560W

RMS Leistung, 4 Ohm: 360W

RC 105C4

Abmessungen: 360 x 147 x 52mm(LxBxH)

Frequenzbereich: 20Hz - 220Hz

Kanaltreppenung: > 50dB

T.H.D @ RMS 1 Watt: < 1%

Signal / Rauschabstand: >80dB

RMS Leistung, 4 Ohm Stereo: 120W x 2 + 300W

RMS Leistung, 2 Ohm Stereo: 120W x 4 + 560W

RMS Leistung, 4 Ohm Stereo: 90W x 4 + 300W

RC 150C5 (BT)

Abmessungen: 215 x 147 x 52mm(LxBxH)

Kanaltreppenung: > 50dB

T.H.D @ RMS 1 Watt: < 1%

Signal / Rauschabstand: >80dB


RMS Leistung, 4 Ohm Stereo: 130W x 2

RMS Leistung, 2 Ohm Stereo: 130W x 2


RMS Leistung, 4 Ohm Stereo: 68W x 4

RC 70C4 (BT)


Technische Daten

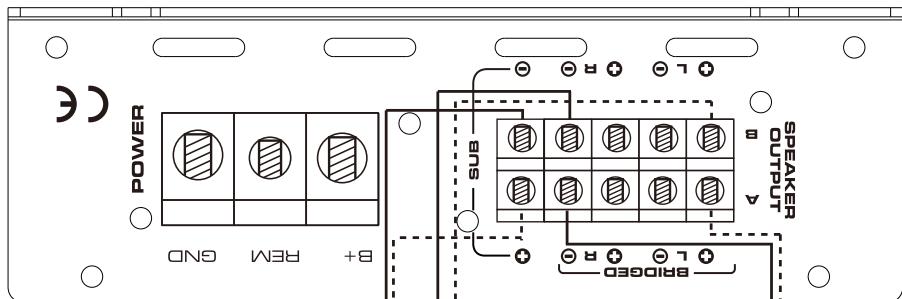

3 KANAL MODE

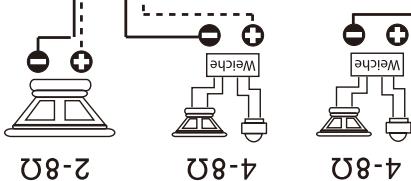

2-8Ω 4-8Ω 4-8Ω

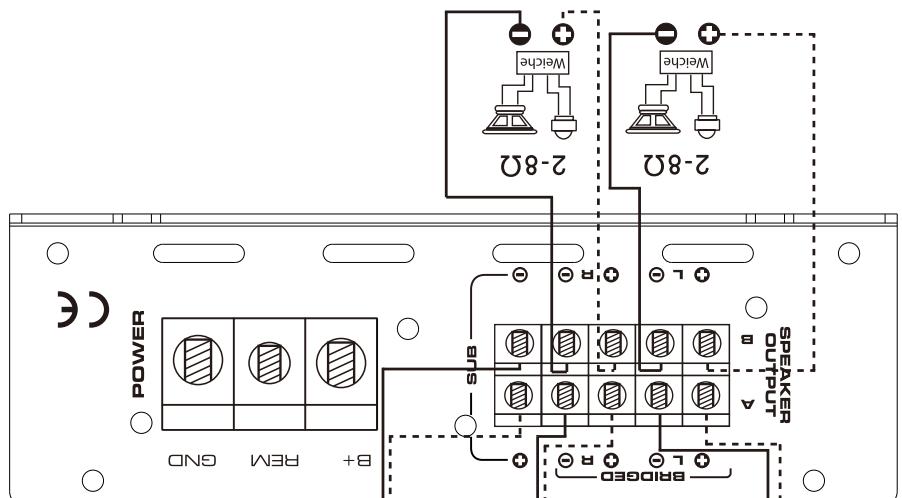


5 KANAL MODE



2-8Ω 2-8Ω 2-8Ω




RC 150C5(BT)

LAUTSPRECHERANSCHLUSS

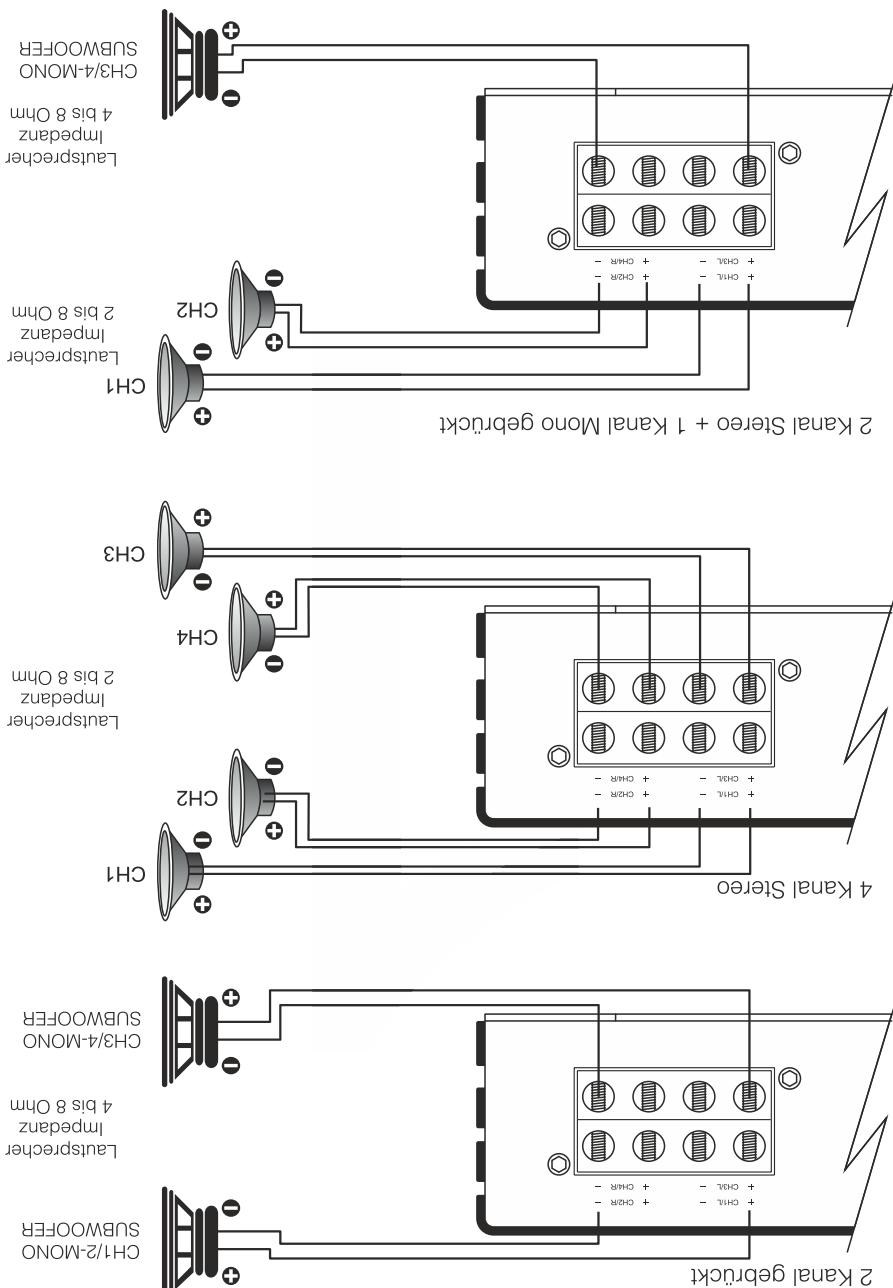



RC 70C4(BT) / RC 105C4


LAUTSPRECHERANSCHLÜSSE

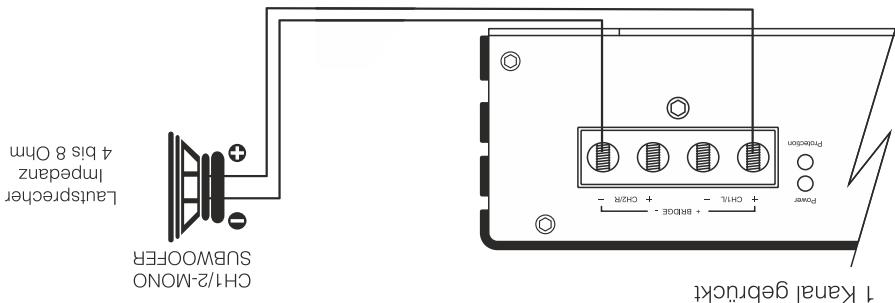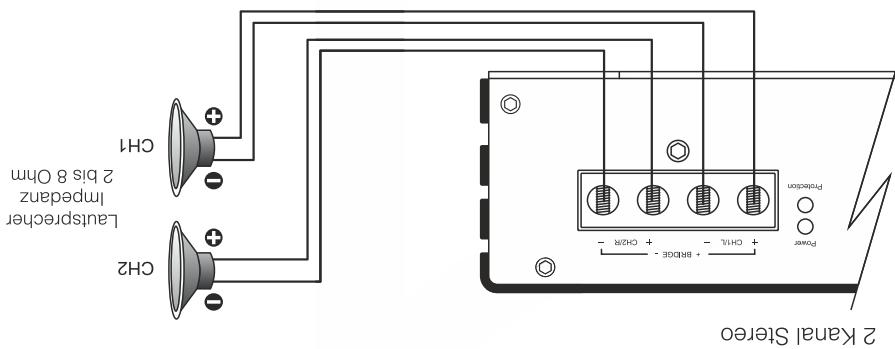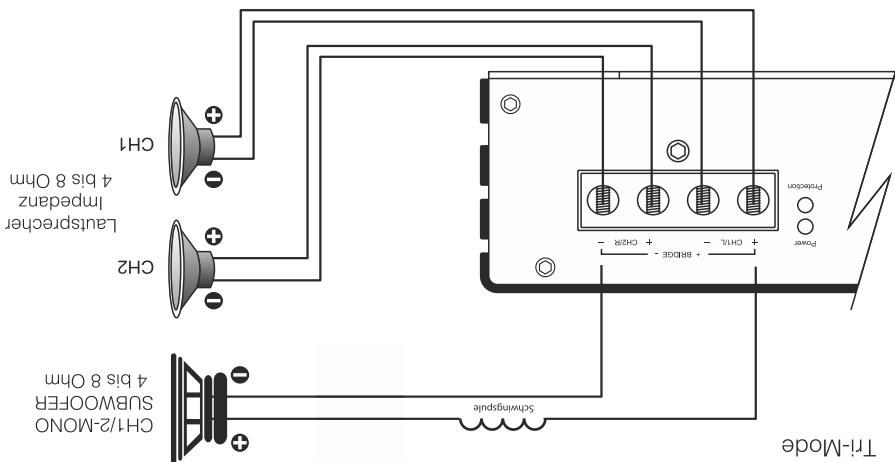


RC 90c2

LAUTSPRECHERANSCHLÜSSE

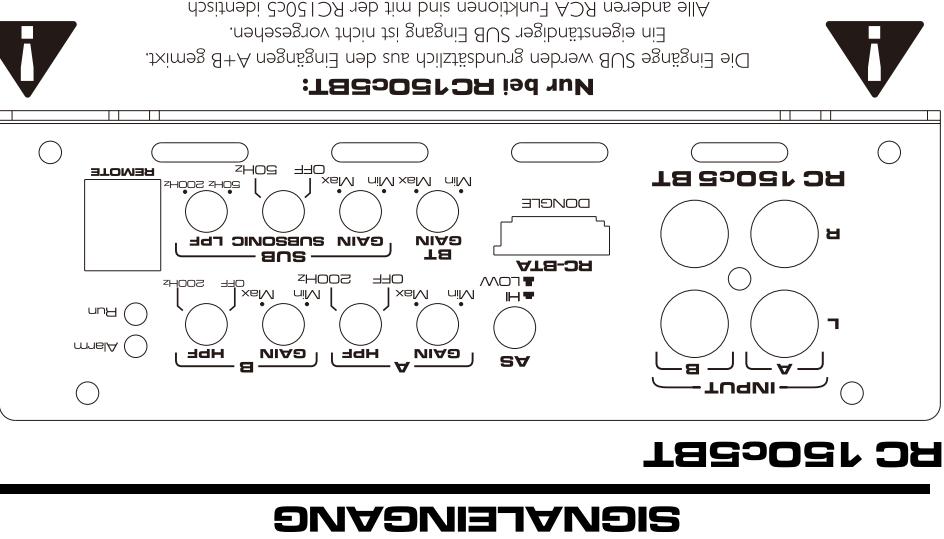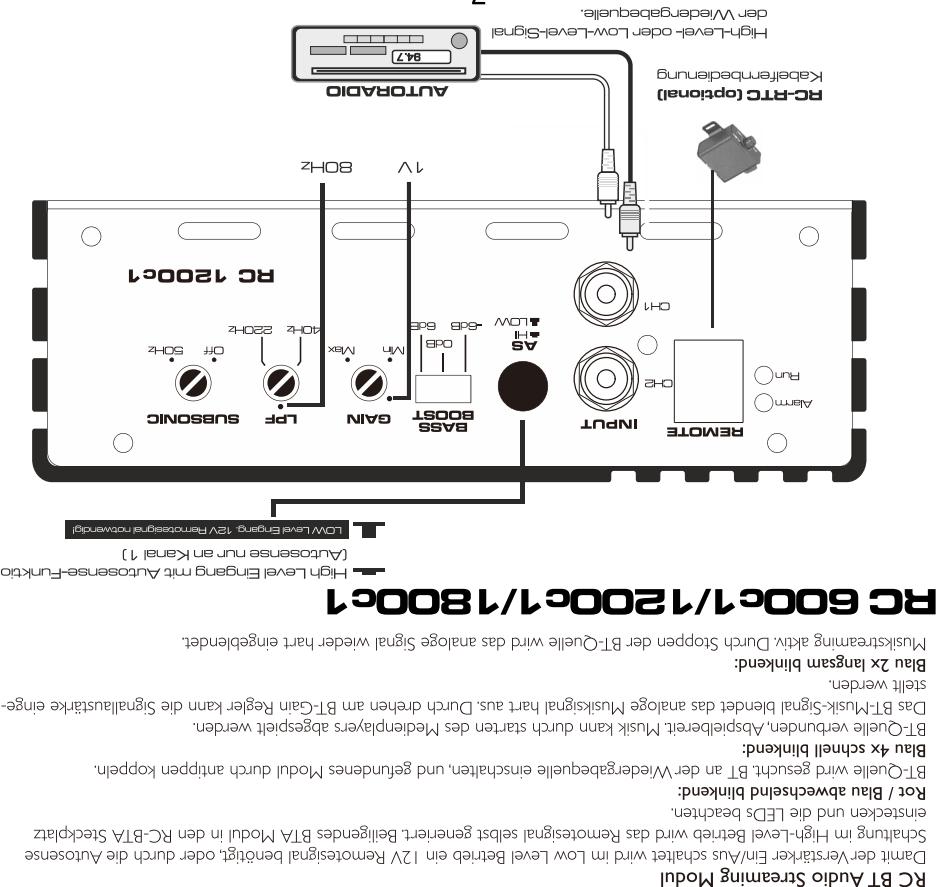

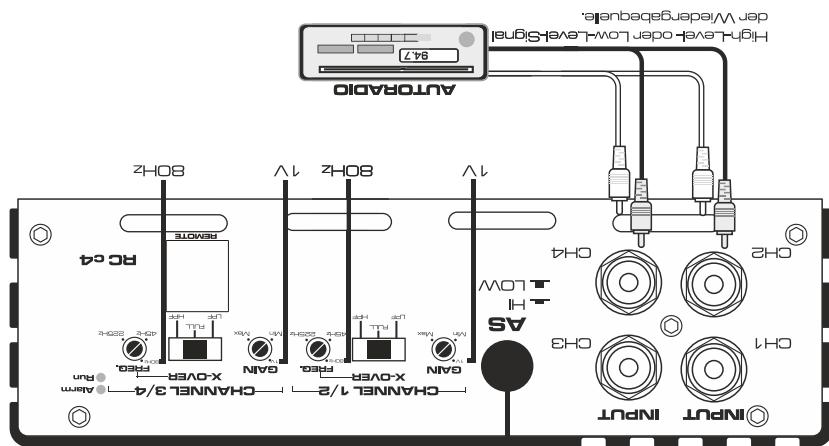

RC 70c4 / RC 105c4

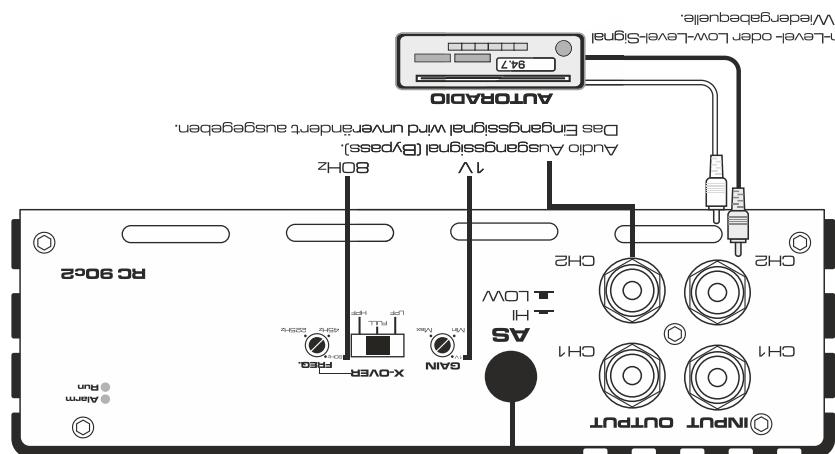

RC 90c2

SIGNALLEITUNG

High-Level Eingang mit Autoselektions-Funktion
(Autoselektion nur an Kanal 1)

Low-Level Eingang 12V Remoteabgabe notwendig

High-Level Eingang mit Autoselektions-Funktion
(Autoselektion nur an Kanal 1)

Low-Level Eingang 12V Remoteabgabe notwendig

verbinden.

Den Remoteausgang des Verstärkers mit dem 12V Remoteausgang des Autoradios verbinden.

4. Remote Anschluss

der Batterie entfernt montiert sein (siehe Skizze).

einem Stromkabel mit austauschendem Kabeldurchschmitt, verbinden. Das 12V Kabel muss mit einer Sicherung abgesichert werden, diese darf max. 30cm vom Pluspol eines 12V Anschlusses des Verstärkers mit dem 12V Pluspol der Autobatterie, mittels

3. +12V Stromanschluss


Die Lötung sollte so kurz wie möglich sein.

Die Massen des Verstärkers mit der Fahrzeugmasse verbinden.


2. Massenanschluss

Als Erstes das Massenkabel der Batterie abklemmen.

1. Batterie abklemmen

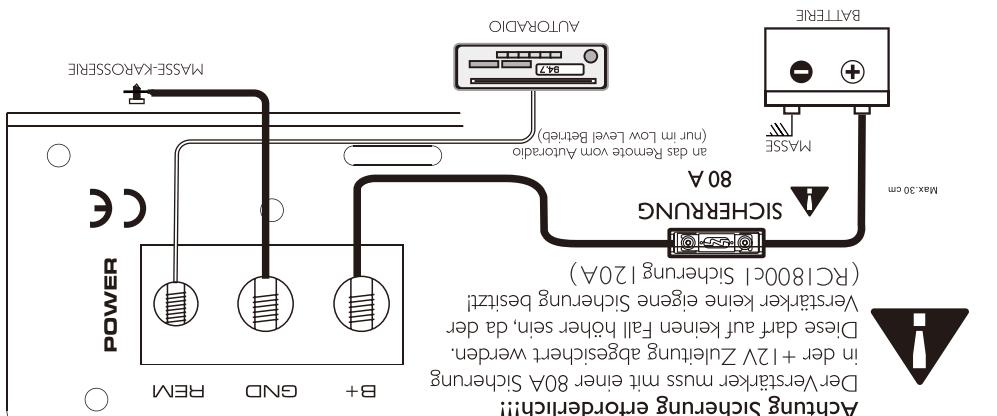

RC 1200C1 / RC 505(BT) / RC 105C4 / RC 1800C1

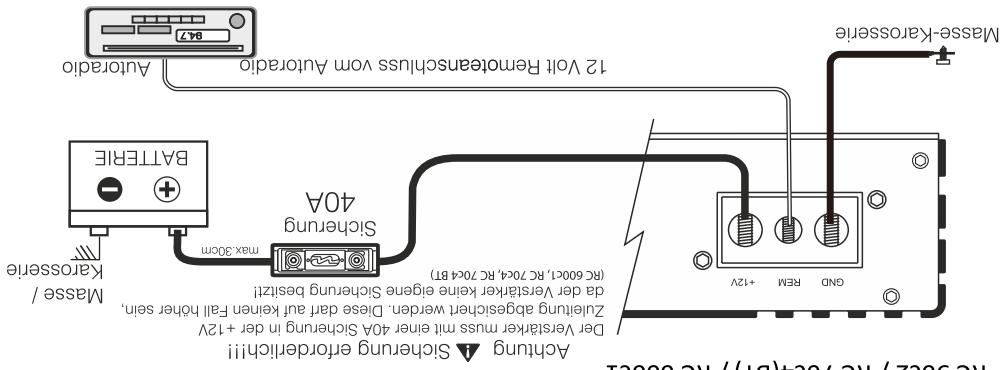

RC 90C2 / RC 70C4(BT) / RC 600C1

STROMANSCHLUSS

G. Leitungseinheiten dürfen nicht gekreuzt, geschleift oder beschädigt sein.

F. Powerleitungen müssen getrennt von Signal- und Lautsprecherleitungen verlegt werden, um Störungen der Empfänger zu verhindern.

E. Leitungseinheiten dürfen nicht parallel zu originalen Fahrzeugleitungen verlegt werden.

D. Verwenden Sie den Verstärker nur in Fahrzeugen mit +12 Volt Betriebsspannung.

C. Schützen Sie den Verstärker vor Feuchtigkeit und Hitze.

B. Achten Sie auf ausreichend Kühlung eingehaltene.

A. Beim Anschluss der Kabel auf ausreichend Kontakt achten. Beschädigen Sie

Bitte beachten Sie folgende Hinweise:

Achtung



- RC 1200c1 / RC 1800c1**
- Anschluss für Remote Controller RTC / RTC.2 (optional)
 - Betriebsspannung: 10V – 16V (Start/Stop bis 7.5V, max. 3sec.)
 - RCA Line Eingang
 - Schutzschaltung: Überhitzung – Überlast – Kurzschluss
 - Low Level Eingang mit Auto-Sense Funktion (Auto-Sense nur Kanal 1)
 - Mono 1 Ohm Betrieb
 - Subsonic Filter: 10 bis 50 Hz
 - Stufenlos regelbarer LOW-Pass Filter: 40 bis 220 Hz
 - Mono High Power Class D Verstärker
 - MOSFET Netzteil
 - Mono High Power Class D Verstärker
 - Anschluss für Remote Controller RTC / RTC.2 (optional)
 - Betriebsspannung: 10V – 16V (Start/Stop bis 7.5V, max. 3sec.)
 - RCA Line Eingang
 - Schutzschaltung: Überhitzung – Überlast – Kurzschluss
 - Low Level Eingang mit Auto-Sense Funktion (Auto-Sense nur Kanal 1)
 - Mono 2 Ohm Betrieb
 - Subsonic Filter: 10 bis 50 Hz
 - Stufenlos regelbarer LOW-Pass Filter: 40 bis 220 Hz
 - MOSFET Netzteil
 - Mono High Power Class D Verstärker

RC 600c1

AUSSATTUNG

- RC150C5BT: Bluetootch-Audio-Streaming, BT-Modul im Lieferumfang
- Betriebsspannung: 10V – 16V (Start/Stop bis 7.5V, max. 3sec.)
- RCA Line Eingang
- Schutzschaltung: Überhitzung – Überlast – Kurzschluss
- Low Level Eingangsempfindlichkeit: Variabel 200mV bis 5V
- High Level Eingang mit Auto-Sense Funktion (Auto-Sense nur Kanal A)
- Subsonic Filter 10 – 50 Hz (Ch 5)
- Stufenlos regelbarer HIGH-Pass Filter 50 bis 200 Hz (Ch 1/2 und 3/4)
- Stufenlos regelbarer LOW-Pass Filter: 50 bis 200 Hz (Ch 5)
- 4 Ohm Brückenebetrieb oder 2 Ohm Stereo, Ch 5: 2 Ohm stabil
- MOSFET Netzteil
- 4 Kanal Class AB Verstärker + 1 Kanal Class D Verstärker
- RC 150C5 / RC 150C5BT**

- RC70C4BT: Bluetootch-Audio-Streaming, BT-Modul im Lieferumfang
- Betriebsspannung: 10V – 16V (Start/Stop bis 7.5V, max. 3sec.)
- RCA Line Eingang
- Schutzschaltung: Überhitzung – Überlast – Kurzschluss
- Low Level Eingangsempfindlichkeit: Variabel 200mV bis 5V
- High Level Eingang mit Auto-Sense Funktion (Auto-Sense nur Kanal 1)
- Stufenlos regelbarer HIGH-Pass Filter 45 bis 225 Hz
- Stufenlos regelbarer LOW-Pass Filter: 45 bis 225 Hz
- 4 Ohm Brückenebetrieb oder 2 Ohm Stereo
- MOSFET Netzteil
- 4 Kanal High Power Class AB Verstärker
- RC 70C4 / RC 70C4BT / RC 105C4**

- Betriebsspannung: 10V – 16V (Start/Stop bis 7.5V, max. 3sec.)
- RCA Line Eingang
- Schutzschaltung: Überhitzung – Überlast – Kurzschluss
- Low Level Eingangsempfindlichkeit: Variabel 200mV bis 5V
- High Level Eingang mit Auto-Sense Funktion (Auto-Sense nur Kanal 1)
- Stufenlos regelbarer HIGH-Pass Filter 45 bis 225 Hz
- Stufenlos regelbarer LOW-Pass Filter: 45 bis 225 Hz
- 4 Ohm Brückenebetrieb oder 2 Ohm Stereo
- MOSFET Netzteil
- 2 Kanal High Power Class AB Verstärker

RC 90C2

AUSSSTATTUNG



RC 105C4

RC 1800C1

RC 1200C1

RC 600C1

RC 150C5 (BT)

RC 700A (BT)

RC 90C2

VERSTÄRKER ANLÄTTUNG

GLADEN GERMAN TECHNOLOGY