

LIMITED WARRANTY INFORMATION

Lightning Audio offers a limited warranty on products on the following terms:

Length of Warranty

- Headunits - One year replacement warranty from date of original purchase - requires proof of purchase.
- Speakers - One year replacement warranty from date of original purchase - requires proof of purchase.
- Amplifiers - One year replacement warranty from date of original purchase - requires proof of purchase.

What is Covered

This warranty applies only to Lightning Audio products sold to consumers by an authorized Lightning Audio Dealer in the United States of America. Products purchased by consumers from an authorized Lightning Audio Dealer located outside of the USA are covered by the authorized Lightning Audio Distributor for the country in which the products were purchased.

Who is Covered

This warranty covers only the original purchaser of Lightning Audio product purchased from an authorized Lightning Audio Dealer in the United States. In order to receive service, the purchaser must provide Lightning Audio with a dated copy of the sales receipt stating the customer name, dealer name and product(s) purchased. Products found to be defective during the warranty period will be replaced (with a product deemed to be equivalent at Lightning Audio's sole discretion) by Lightning Audio.

What is Not Covered

1. Damage caused by accident, misuse, abuse, improper installation or operation, water or moisture, excessive heat, theft, or shipping
2. Any cost or expense related to the removal or reinstallation of product
3. Items previously repaired, serviced or modified by an unauthorized service center
4. Any product which has had the serial number defaced, altered, or removed
5. Subsequent damage to other components
6. Any product purchased outside the U.S.
7. Any product not purchased from an authorized Lightning Audio Dealer

Limit on Implied Warranties

Any implied warranties of fitness for use and merchantability are limited in duration to the period of the express warranty set forth above. Some states do not allow limitations on the length of an implied warranty, so this limitation may not apply. No person is authorized to assume for Lightning Audio any other liability in connection with the sale of the product.

How to Obtain Service

Defective products should be returned to your local authorized Lightning Audio Dealer for warranty service or, you may call 1-888-881-8186 for Lightning Audio customer service. You must obtain an RA# (Return Authorization number) prior to returning any product to Lightning Audio. Return Authorizations are valid for 30 days. You are responsible for the shipment of defective product to Lightning Audio and you MUST include valid proof of purchase. Mark your RA# clearly on outside of your shipping carton. Products received without a valid RA# will be refused and returned to sender at sender's expense.



LA-ZERO LOADED ENCLOSURE

LA-ZERO GAJA GARGADA

L0-1X10

L0-1X12

L0-2X10

L0-2X12

SPECIFICATIONS

L0-1X10	Single 10" SVC
Nominal Impedance (Ohms)	4 Ω
Replacement Woofer	L0-S410
Power Handling (Watts)	150 RMS / 300 Max
Overall Dimensions (HxWxD)	12.0" x 15.75" x 12.25" (30.5cm x 40cm x 31.1cm)

L0-2X10	Dual 10" SVC
Nominal Impedance (Ohms)	2 Ω
Replacement Woofer	L0-S410 (wired internally)
Power Handling (Watts)	300 RMS / 600 Max
Overall Dimensions (HxWxD)	12.0" x 30.0" x 12.25" (30.5cm x 76.2cm x 31.1cm)

L0-1X12	Single 12" SVC
Nominal Impedance (Ohms)	4 Ω
Replacement Woofer	L0-S410
Power Handling (Watts)	150 RMS / 300 Max
Overall Dimensions (HxWxD)	14" x 17.5" x 12.25" (35.6cm x 44.5cm x 31.1cm)

L0-2X12	Dual 12" SVC
Nominal Impedance (Ohms)	2 Ω
Replacement Woofer	L0-S412 (wired internally)
Power Handling (Watts)	300 RMS / 600 Max
Overall Dimensions (HxWxD)	14.0" x 33.75" x 12.25" (30.5cm x 85.7cm x 31.1cm)




FEATURES

Enclosure Features

- High Current Binding Posts
- Constructed with 5/8" MDF
- Covered with high Density Carpet

Speaker Features

- Parabolic Polypropylene Cone
- 12 AWG Compression Terminals
- 18 ga. Stamped Steel Frame
- Optimized for Sealed Enclosures

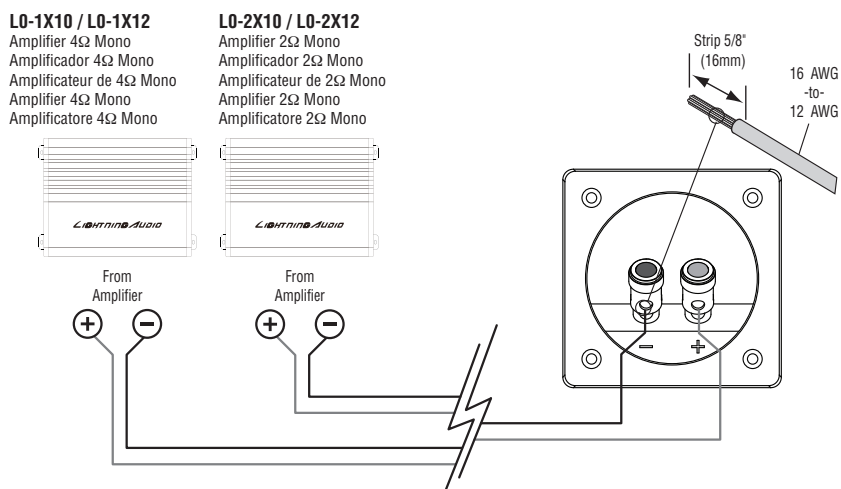

INSTALLATION

CAUTION: Before installation, disconnect the battery negative (-) terminal to prevent damage to the unit, fire and/or possible injury.

Run the speaker cable from the amp. When routing the speaker cable from the amplifier, avoid running it close to any sources of high current (wiring harnesses). The positive (+) speaker output from the amp connects to the red terminal of the enclosure, and the negative (-) connects to the black terminal.

INSTALACIÓN

PRECAUCIÓN: Antes de la instalación, desconecte el terminal negativo de la batería (-) para prevenir daño a la unidad, incendio y/o posibles lesiones.

Recorrido del Cable de Altavoz Desde el Amplificador. Al llevar el cable de altavoz desde el amplificador, evite que pase cerca de cualquier fuente de alto corriente (cables de alimentación). El terminal positivo (+) de las salida de rojo, y el terminal negativo (-) al terminal negro.

INSTALLATION

MISE EN GARDE: avant d'entamer l'installation, déconnectez la broche négative (-) de la batterie pour éviter tout risque de blessures, d'incendie ou de dommages à l'appareil.

Branchement du câble du haut-parleur de l'amplificateur. En plaçant le câble du haut-parleur de l'ampli, évitez de l'approcher d'une source de courant important. La sortie positive de l'ampli se branche sur le terminal rouge du caisson, et le négatif se branche sur le terminal noir.

EINBAU

VORSICHT: Entfernen Sie vor dem Einbau den negative Batteriepol, um Schäden am Gerät, Feuer bzw. mögliche Verletzungen zu vermeiden.

Anschluß des Lautsprecherkabels. Beim Anschluß des Lautsprecherkabels sollten Sie darauf achten, daß das Kabel keine Fahrzeugstromkabel kreuzt, um Einstellungen zu verhindern. Die Plus-Leitung des Lautsprecherkabels kommt in die rote Klemme des Terminals, die Negativ-Leitung in die schwarze Klemme des Terminals.

INSTALLAZIONE

ATTENZIONE: Prima dell'installazione, scollegate il terminale negativo (-) della batteria per evitare danni all'unità, pericoli d'incendio e/o potenziali lesioni personali.

Far correre il cavo dell'altoparlante all'amplificatore. Quando fate correre il cavo dell'altoparlante all'amplificatore non fatelo passare vicino a qualsiasi cavo dell'impianto elettrico di serie dell'auto. Il segnale positivo dell'altoparlante (+) in uscita dall'amplificatore è collegato al terminale rosso del diffusore, e il negativo (-) al terminale nero.