


STEG

NT-33

SUBWOOFER SPEAKER SYSTEM
OWNER'S MANUAL

Thank you for purchasing a STEG brand speaker. It is a state-of-the-art product specifically designed and engineered for vehicle use, and has been thoroughly tested to ensure consistent and reliable performance.

Should you have any questions regarding the installation or operation of your STEG Speaker, which are not answered in this manual, please contact your dealer for assistance.

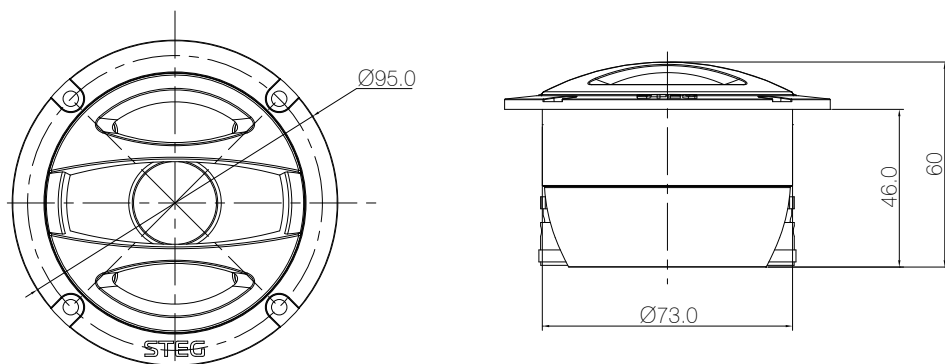

PRECAUTIONS

- Before making holes, check the mounting space with supplied template.
- To prevent noise pick-up, keep the wiring away from motors, highvoltage leads and other potential noise sources.
- To prevent a short-circuit, keep all wiring away from moving parts and sharp edges.
- Make sure you carefully read and understand the installation instructions before installing this subwoofer in your vehicle.

Product information

Rms.Power (W)	50
Throat diameter	72.5mm. 2.85in
Rated impedance	4ohm
Minimum impedance	7.3 ohm@3.5kHz
Sensitivity@1w/1m(dB)	105
D.C.Resistance	3.6 ohm
Power capacity	30w AES above 0.8kHz
	45w AES above 1.5kHz
Program power	70w above 0.8kHz
	90w above 1.5kHz
Sensitivity	95dB 1w@1m
Frequency range	2KHZ-20kHz
Voice coil diameter	33.5mm. 1.32in.
Magner Size	33.1x6x7 N38.