

User's Manual

15-INCH HIGH POWER
SUBWOOFER

CX15

CHAOS
EXTREME
SERIES

BOSS[®]
AUDIO SYSTEMS


CX15
15-INCH HIGH POWER SUBWOOFER

07.2012




tech support: www.bossaudio.com/support

BOSS Audio Systems
3451 Lunar Court • Oxnard, CA 93030
www.bossaudio.com
800.999.1236

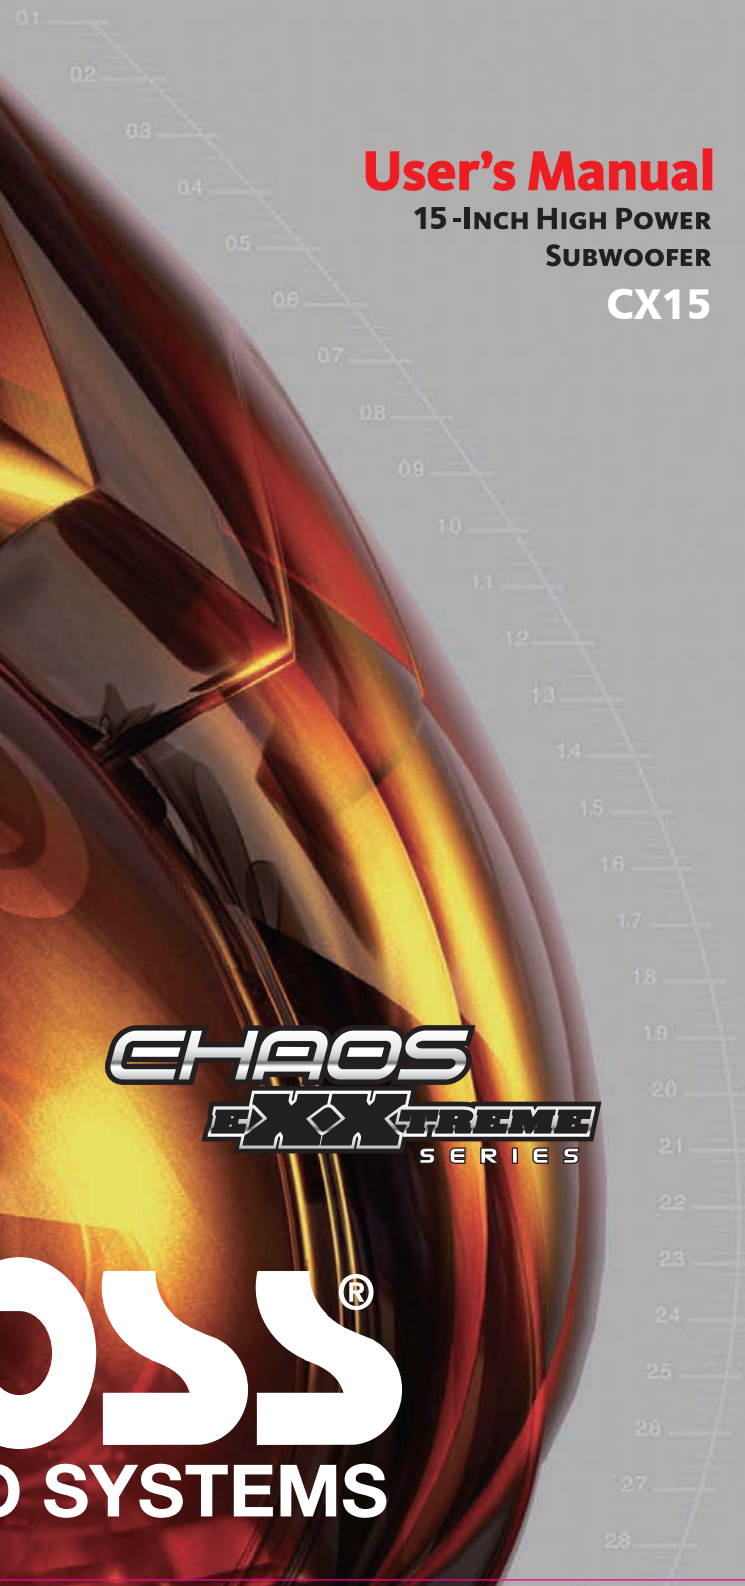

Recommended Enclosures



Please note : Our recommended box volumes are given for internal air requirements.

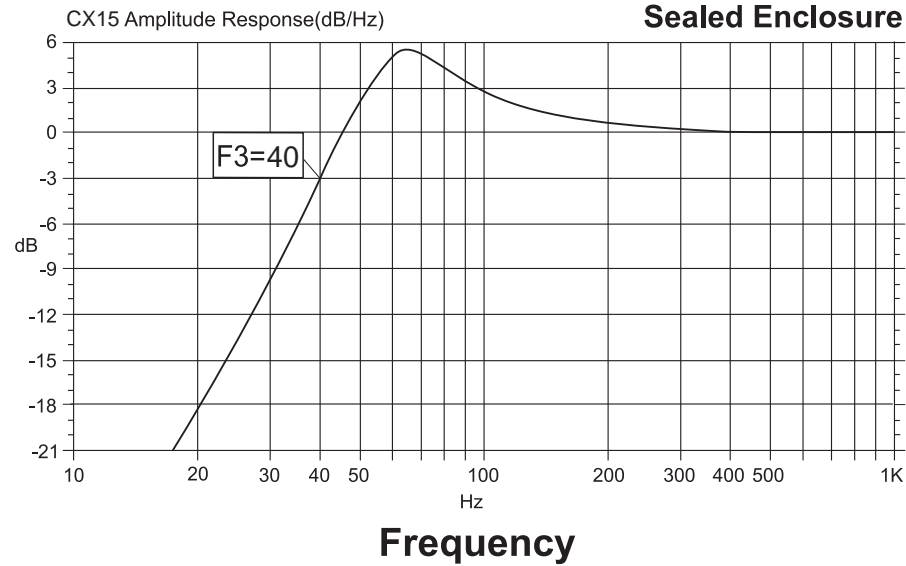

Sealed Enclosure

Box Volume : 2.0 Cu Ft

Box is given as internal air volume including driver displacement

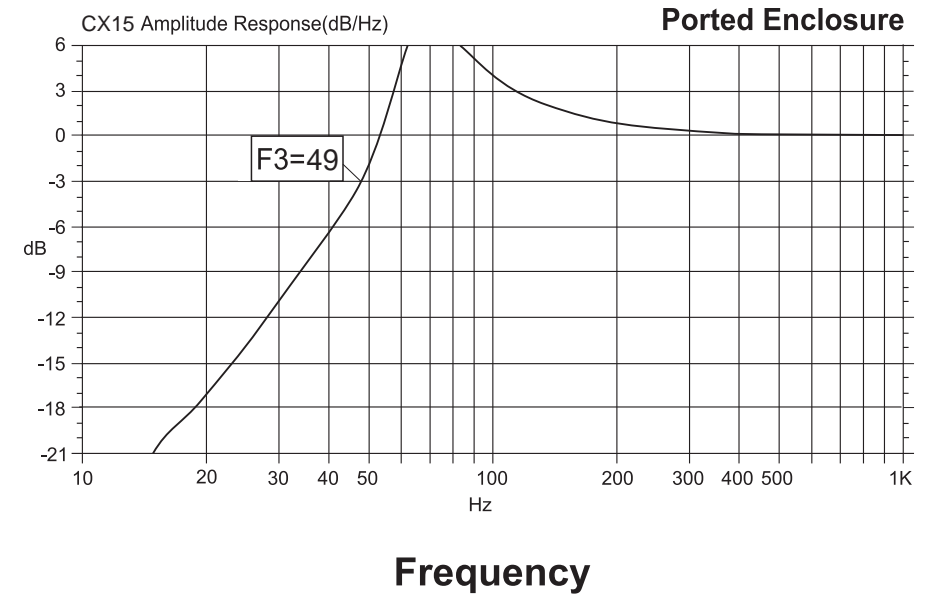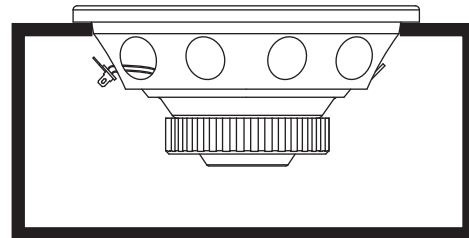


Ported Enclosure

Box Volume : 2.0 Cu Ft

Box is given as internal air volume including driver displacement

Port Frequency : 33 Hz
 Port Diameter : 4 Inches
 Port Length : 10 Inches

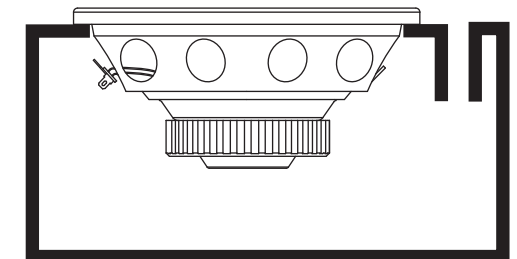

Product Specifications

| Speaker Impedance | table | 4 ohms |
|---|--------|------------|
| Free Air Resonance | (Fs) | 25 |
| Total Q Driver @ FS including all resistance's | (Qts) | 0.777 |
| Q of the Driver @ FS including non electrical resistance only | (Qms) | 8.902 |
| Q of the Driver @ FS including electrical resistance only | (Qes) | 0.852 |
| The Driver's compliance expressed as an equivalent | (Vas) | 8.747 |
| Volume of all (cubic Ft.) | | |
| The Driver's linear displacement (inches) | (Xmax) | 0.236 |
| The DC resistance of the driver's single voice coils(ohm) | (Re) | 3.6 |
| Thermal Power rating of Driver (R.M.S./Peak) | (Pe) | 500W/1000W |
| The Driver's sensitivity (dB) | (Sens) | 96 |

Calculating Enclosures

It is difficult to give exact box dimensions that are universal for all cars and trucks. It is for this reason that you must be able to calculate the space in which you have available in order to achieve the proper air volume required.

It is recommended to build your enclosure from 3/4" thick MDF (medium density fiberboard). Make sure the enclosure is sealed air tight.

Calculating External Volume

1) To calculate box volume, measure the outside Width x Height x Depth of the enclosure. Example 12" x 14" x 9" = 1512"

2) Next you must convert cubic inches into cubic feet. To do this, You must divide the cubic inch total by 1728". Example 1512 ÷ 1728= .875 Cubic feet

Calculating Internal Volume

1) To calculate the internal (net) volume of the above box you must first multiply the thickness of the wood you are using by Two (2) Example; 3/4" x 2"=1.5"

2) Next Subtract 1.5 from each of the outside measurements of the box.
Width 12-1.5=10.5 Height 14-1.5=12.5 Depth 9-1.5=7.5

3) Multiply the new totals (H x W x D) Example : 10.5 x 12.5 x 7.5=984.375

4) Next you must convert cubic inches into cubic feet.To do this,you must divide the cubic inch total by 1728" Example 984.375 ÷ 1728= .5696 Cubic feet

Thank you for purchasing a BOSS AUDIO subwoofer. It is a state-of-the-art product carefully designed manufactured for vehicle use, and has been thoroughly tested to ensure consistent and reliable performance. If you have any question about the operation of your BOSS AUDIO subwoofer which are not answered by this manual, contact your dealer in the first instance.

Precautions

- Before making holes, check the mounting space with supplied template
- To prevent noise pick-up, keep the wiring of this unit away from motors, high-voltage leads and other possible noise source.
- To prevent short-circuit, keep all wiring away from moving parts sharp edges.
- Make sure you have carefully read and understood the installation instruction.

15" (381mm) Subwoofer

(500 Watts RMS Sealed Enclosure)

- 15" (381mm) BLACK POLY INJECTION CONE
- FOAM SURROUND
- 2.5" (64mm) HIGH TEMPERATURE ALUMINUM VOICE COIL
- 1000 WATTS PEAK/500 WATTS RMS
- FREQUENCY RESPONSE: 25Hz-2KHz
- SENSITIVITY: 96dB (1 WATT/1 METER)
- IMPEDANCE: 4 OHM
- MOUNTING DEPTH: 6" (152mm)